

Tips for using your new home security system

Leaving home?

Press # and 2 or Away AWAY

This activates your door sensors and also activates the motion sensor. It will then allow your normal entrance delay when you return home.

Staying home or expecting someone?

Press # and 3 or Stay STAY

This bypasses your motion detector since you will be staying in the home. This also activates your door sensors, but will allow the normal entrance delay on your designated entry door, for whoever may be coming in.

Bedtime?

Press # and 7 or Instant INSTANT

This bypasses your motion detector since you will be staying home; however, all of your doors will sound the alarm instantly. NOTE: This mode gives zero delay on your normally designated door.

To disarm your system:

Enter your 4 digit code and then 1 or off OFF

This will completely disarm your system. By pressing this sequence, it will clear out any function you may have pressed in the above instructions.

If an alarm occurs (siren sounding)

Enter your 4 digit code and then 1 or off, (Do this sequence TWICE) OFF OFF

This will disarm your system and silence the siren. The monitoring facility will be calling your shortly thereafter and will ask for your password.

Door chime: (Keypad will sound when the doors are opened while the system is off)

Enter your 4 digit code and then 9 CHIME

To turn the door chime off: Enter your 4 digit code and then 9

Customer Service: **888-642-4567**
Sales: **800-905-4127**

**SECURITY
OPTIONS**[®]

Lic# 885



Authorized Dealer